

## Installing Prolific USB to Serial Driver for Windows 8

1. Click the EXE link above these instructions - Prolific USB to Serial Driver for Windows 8 – Download.
2. At the bottom of your screen, select **Run** to the security question “Do you want to run or save **Prolific\_Driver\_ver332102.exe** from newgy.com”.
3. After installed successfully, open **Device Manager**. You will see a warning in front of the Prolific USB to Serial device.
4. Right click on the Prolific USB to Serial device and select **Update Driver Software...**
5. Then select **Browse my computer for driver software**
6. Then select **Let me pick from a list of device drivers...**
7. Select the Prolific USB to Serial Driver in the list and install.